

### 25. Fuel Pump

#### A: REMOVAL

##### WARNING:

Place "NO FIRE" signs near the working area.


##### CAUTION:

- Be careful not to spill fuel.
- When the fuel meter indication is higher than two third of the total, perform the work after draining the fuel not to spill the fuel.


##### NOTE:

Fuel pump assembly consists of fuel pump, fuel filter and fuel level sensor.

- 1) Release the fuel pressure. <Ref. to FU(H6DO)-42, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 2) Drain fuel. <Ref. to FU(H6DO)-42, DRAINING FUEL (WITH SUBARU SELECT MONITOR), PROCEDURE, Fuel.>
- 3) Remove the second seat. <Ref. to SE-13, REMOVAL, Second Seat.>
- 4) Remove the service hole cover.

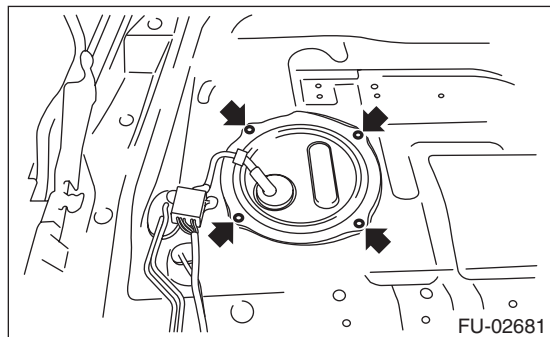


- 5) Disconnect the connector from fuel pump.

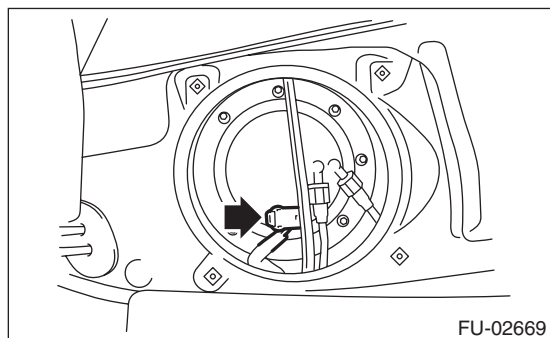

- 6) Disconnect the quick connector, and then disconnect the fuel delivery hose and jet pump hose. <Ref. to FU(H6DO)-54, REMOVAL, Fuel Delivery & Evaporation Lines.>

- 7) Remove the nuts which install fuel pump assembly onto fuel tank.

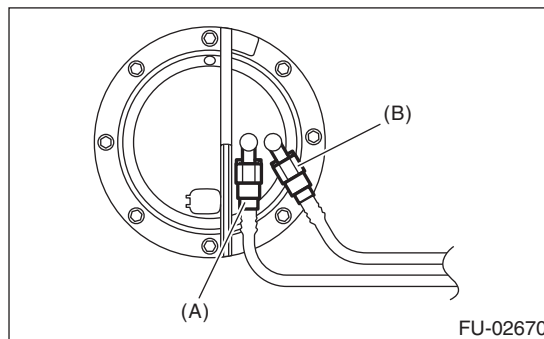

- (A) Delivery hose  
(B) Jet pump hose

- 8) Remove the fuel pump assembly from the fuel tank.

#### B: INSTALLATION

Install in the reverse order of removal while being careful of the following.


- Make sure the sealing portion is free from fuel or foreign matter before installation.
- Install with the protrusion (A) of gasket aimed at the front side of the vehicle.
- Insert the protrusion (B) of gasket to the upper plate. (3 places)
- Align the protrusion (C) of fuel pump assembly with the cutout portion of the upper plate.
- Tighten the nuts to the specified torque in the order as shown in the figure.

##### NOTE:

Use a new gasket and retainer.

##### Tightening torque:

**4.4 N·m (0.4 kgf-m, 3.2 ft-lb)**

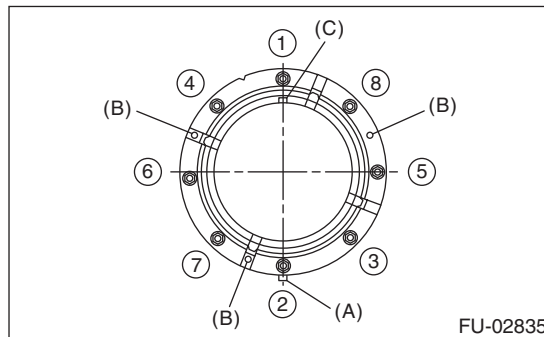

# Fuel Pump

## FUEL INJECTION (FUEL SYSTEMS)

---

### C: INSPECTION

Connect the lead harness to the connector terminal of fuel pump, and apply the battery power supply to check whether the pump operates.

#### CAUTION:

- Wipe off fuel completely.
- Keep the battery as far apart from fuel pump as possible.
- Be sure to perform the ON/OFF operation on the battery side.
- Do not run the fuel pump for a long time under non-load condition.

